


INSTALLATION INSTRUCTIONS Modular Wall

Preparation

Depending on the type of installation, you will need the following tools and materials. When selecting the appropriate tools and supplies, please consider not only the weight of the panel but also the condition of the substrate. If the tools, weight, and substrate are not properly matched, there is a risk that the panel could fall later (risk of injury!).

Not all Modular Wall products are suitable for installation with screws. For products with a full-surface decorative layer, we recommend adhesive installation to avoid damaging the decorative side.

The wall panels are not suitable for installation in damp rooms; installation in such areas is at your own risk.

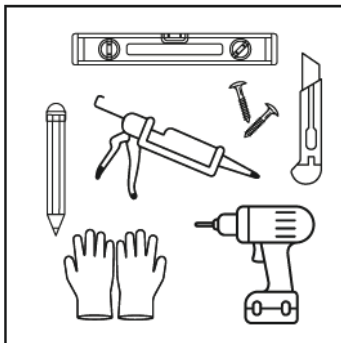

Screws:


- Cordless screwdriver or screwdriver
- Drill, if necessary
- Screw (anchors) suitable for the wall type
- Spirit level
- Pencil
- Gloves

Gluing:

- Glue gun
- Adhesive suitable for the surface
- Spirit level
- Gloves




Please wear gloves to avoid cuts from any sharp edges or splinters.

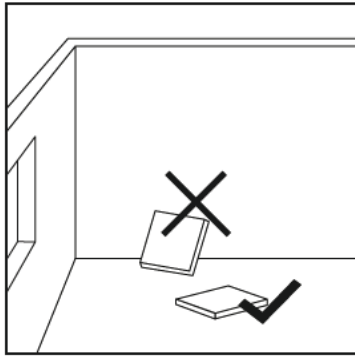

Never store the packages and panels upright; instead, store them flat on a level surface to prevent warping. Protect the panels from moisture. Expansion and contraction occur under varying humidity conditions. Moisture promotes mold growth.


The subfloor must be clean and dry. Before installation, completely remove any old flooring from the subfloor if it affects the levelness of the surface or hinders installation.

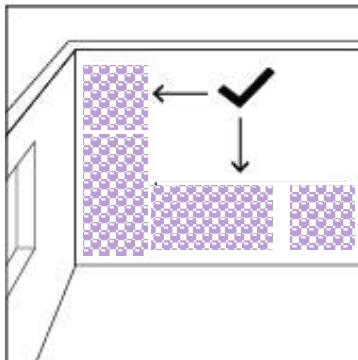


The panels can be mounted vertically or horizontally, whichever you prefer.

If you need to cut the panels to size, use a jigsaw. We recommend covering the cut edge of the veneer with masking tape beforehand to prevent fraying.

Wall Mount

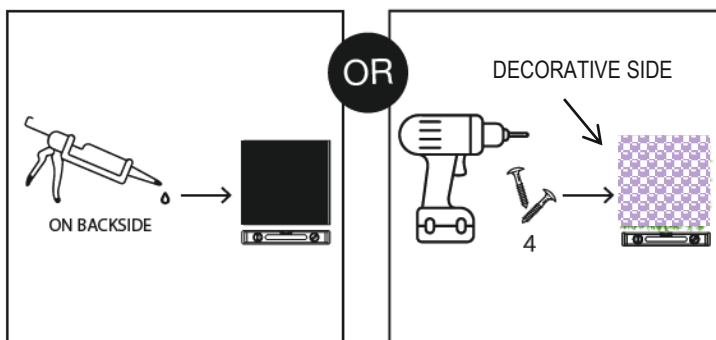


The wall panels can either be screwed or glued to the wall.

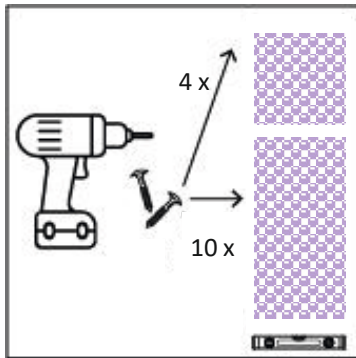**Screws:**

To install each panel, you will need 4–10 screws (4 for the small size and 10 for the large size), which should be spaced evenly and match the color of the product.

Screw through the felt. Mark the holes on the panel beforehand.

Not all Modular Wall products are suitable for installation with screws. For products with a full-surface decorative finish, we recommend adhesive installation to avoid damaging the decorative side.

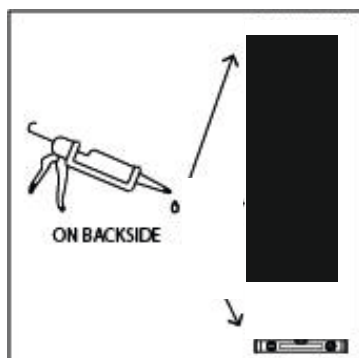**Adhesive Application: :**

We recommend using a solvent-free installation adhesive to attach the wall panels. However, the choice of the appropriate adhesive always depends on the substrate. Apply the adhesive in dots or in zigzag lines to the back of the panel.

Align the panels using a level and press them firmly into place.

Possible Installation Options

Modular Wall products can be combined with a wide variety of other panels.

